

PL-FD113 Differential Pressure Switch

Issue Number 7.2 03/11/2021



Features and Benefits

- Wide range and adjustable switching point
- Switches 24-240Vac/dc
- 1/4" BSP female connections
- Visible set point scale

Technical Overview

The PL-FD113 liquid differential pressure switch is suitable for the monitoring flow across pumps, chillers, valves etc. The set point is adjustable in the range 0.3 to 4.5bar, and is suitable for non-aggressive media such as water, air, oil, diesel, steam (with pig tail) etc.

Approximate set point can be viewed on the dial at the front of the unit.

Product Codes

PL-FD113

0.3 to 4.5bar Liquid differential pressure switch

Specification

0.3 to 4.5 bar Range Factory setting 0.7 Bar Switching differential (fixed) 0.2 Bar Max. differential pressure 12 Bar 25 Bar Max. pressure Pressure connections 1/4" BSP female -10 to +70°C Ambient temperature

Media temperature Max 70°C Electrical connections

Switch ratings:

Screw terminals for 1.5mm² cable

AC

3A @ 230 Vac DC 0.1A @230Vdc

Materials:

Fittings Brass

Wetted parts Phosphor bronze Switch back plate Zinc plated mild steel Flame res. Polycarbonate Housing cover 128 x 175 x 48mm

Dimensions Protection IP30 4G

Vibration resistance Czech Republic Country of origin

Conformity LVD, CE & UKCA Marked



When installed, the output contacts may carry 240Vac. Special care must be taken to isolate the switched voltage prior to any work being undertaken.





At the end of the products useful life please dispose as per the local regulations.

Do not dispose of with normal household waste





PL-FD113 Differential Pressure Switch


Sue Number 7.2 03/11/2021

Installation, Electrical Connections & Dimensions

- 1. The PL-FD113 should only be connected by a competent, suitably trained technician, experienced in installation with hazardous voltages. (>50Vac & <1000Vac or >75Vdc & 1500Vdc). Pressure connections should carried out by a technician qualified to work with the media being monitored.
- 2. Ensure that all power is disconnected before carrying out any work on the PL-FD113.
- 3. Ensure that the unit is not subjected to ingress by water.
- 4. Mount the PL-FD113 using the screws supplied. If the supplied screws are lost, an M4 x 6 screws can be used. This must have a depth of 5mm or less.
- 5. Connect pipe work using ¼" BSP male adapters into the ¼" BSP female fittings on the switch. Low pressure connection is at the top of the switch and the high pressure connection at the bottom as per the diagram below.
- 6. Set the switching point by inserting a screwdriver into the slots wheel above the scale.

It is not recommended that the scale is not used for accurate setting of the switch position.

Electrical connections;

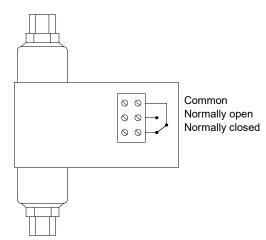

Dimensions:

